

WeatherMaster Storage Cart Assembly Instructions







Check that all bolts are tight before use



WeatherMaster Storage Cart Loading Instructions

WeatherMaster 250 & 300

1. On one side of the cart load three posts upside down into the receiver slots with the bases **above the upper rail**. Slide each post to the side so it is held securely in the receiver slot.

2. On the same side load 3 posts along the length of the cart standing upright on the **upper decks** beneath the hanging posts.

3. On the other side of the cart load 3 posts upside down into the receiver slots with the bases **between the upper and lower rail**. Slide each post to the side so it is held securely in the receiver slot.

4. On the same side load 3 posts along the length of the cart standing upright on the **lower deck** beneath the hanging posts.

WeatherMaster 335

1. Load 4 posts upside down into the center slot of the top rail.

2. On each side of the **lower deck** load 3 posts upright along the length of the cart. Bases should be positioned with the flat edges meeting in the center of the deck.

Note: Bases on both sides of the cart will overhang the deck by about 1"