


## INSTRUCTIONS



Stud

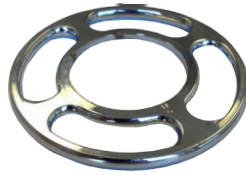

Rope Loops



Crown Top



Ball Top

### Attaching the Top

1



Screw the stud into the top leaving about half the thread exposed

2



Place the Rope Loop on the post top with the recess on the inside circumference facing down

3



Screw the Top into the post through the Rope Loop. Make sure the Top is screwed down tight