


Components



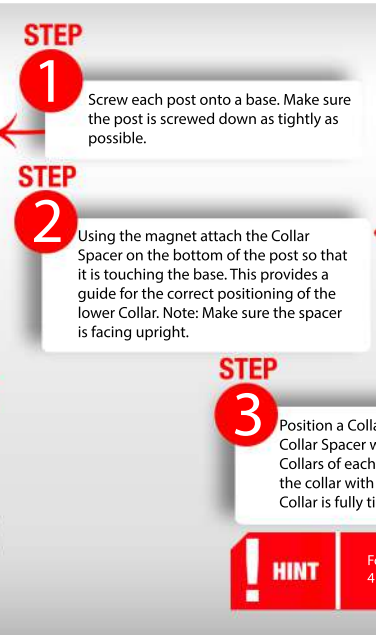

STEP 1
Screw each post onto a base. Make sure the post is screwed down as tightly as possible.



STEP 2
Using the magnet attach the Collar Spacer on the bottom of the post so that it is touching the base. This provides a guide for the correct positioning of the lower Collar. Note: Make sure the spacer is facing upright.



STEP 3
Position a Collar on the post so that it is resting on the Collar Spacer with the Lug Slots facing up. Lug Slots on the Collars of each posts should be facing each other. Tighten the collar with the allen key provided. Note: Ensure the Collar is fully tightened or the system will be wobbly.



STEP 4
With the posts positioned a panel width apart, lift the panel and fit the lower panel lugs into the collar lug slots.

HINT For best installation align the 4 Lug Slots with the 4 Splines at the top of the post.



STEP 5
Pivot the panel into place.



STEP 6
Position a Collar on the top of the post with the Lug Slots facing down and fit the upper panel Lugs into the Collar Lug Slots. Tighten the Collar with the allen key provided. Note: Ensure the Collar is fully tightened.



STEP 7
Place a Support Block under the panel with the channel facing upwards and the low side facing towards the post. Slide the block along until it is pushed firmly against the post.

HINT Each panel should have two Support Blocks, one at each end.

HINT If the Top Collar is joining 2 panels together, please complete steps #1-#5 with the second panel and then use the top collar to lock both panels in place.